SIGMA BANNERSTAND – ASSEMBLY INSTRUCTIONS

1
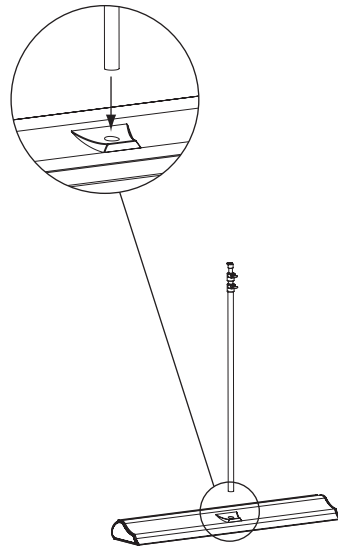
2
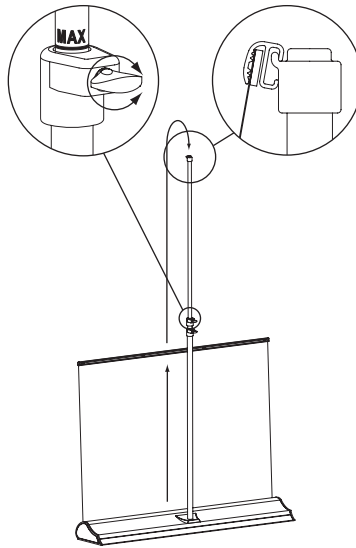
3
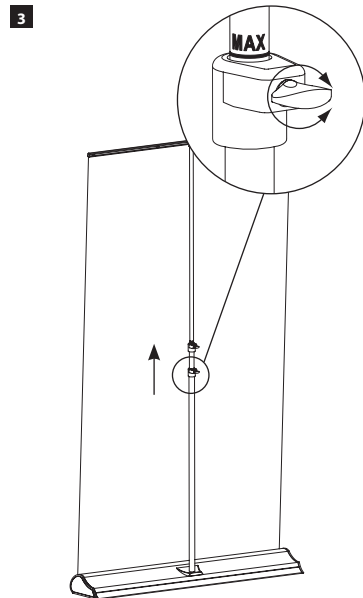
4

IMPORTANT NOTICE:
When retracting a graphic always slowly guide it into base housing, otherwise graphic damage may occur.

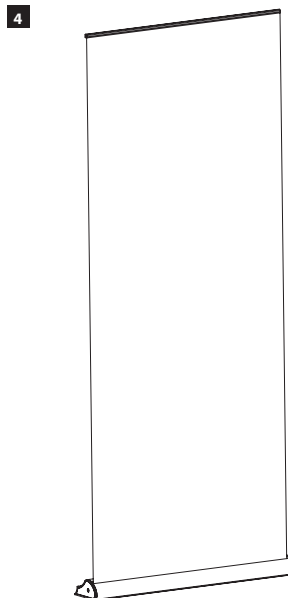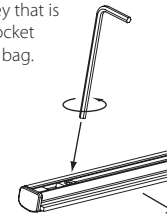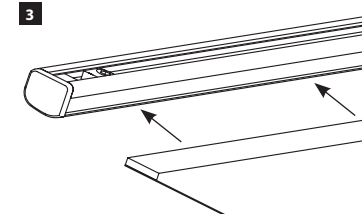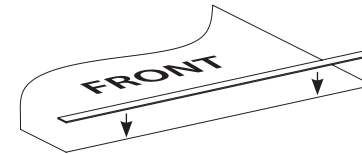## GRAPHIC ATTACHMENT

**1** Use allen key that is stored in pocket inside carry bag.

2 Attach self-adhesive hanging strip to rear top edge of graphic.

REAR OF GRAPHIC

3

4

5 Attach hook fastener to front bottom edge of graphic.

6 Attach front bottom edge of graphic panel to loop fastener on leader sheet.

FRONT

FRONT OF GRAPHIC

**7** Holding onto graphic, remove locking pin and allow to slowly retract into unit.
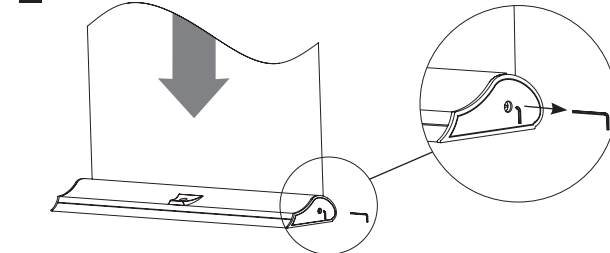
ADDING OR REMOVING GRAPHIC TENSION

ADDING TENSION

Insert a standard flat headed screwdriver into slot located in the end of unit and turn clockwise to add extra graphic tension.
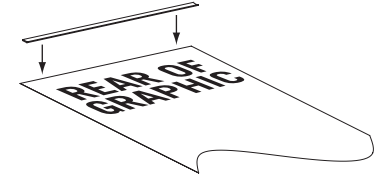
REMOVING TENSION

To un-tension graphic panel place a flat headed screwdriver into the slot and push to disengage ratchet. Hold in and turn anti-clockwise until tension in spring is released. To remove graphic panel peel it off leader sheet. The hanging strip can also be removed or a new hanging strip can be purchased.
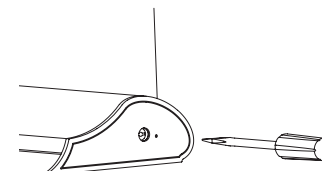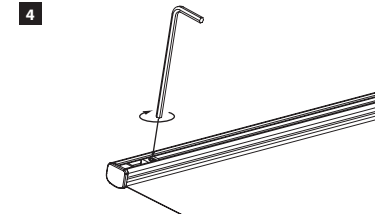
IMPORTANT NOTICE:
To ensure a proper bond between graphic and double-sided tape/hook fastener, pressure must be applied. The adhesive should be allowed to cure for 24 hours before use.